



*Adventure  
Pilot™*

# *iFly 700™*

## **Additional Features**

### **Contents**

System Menu .....	2
Transferring Media Files to Your iFly 700.....	3
Video Player Optimal Settings.....	3
Transferring Audio and Video Files to the Play List .....	4
Using the Multimedia Player .....	4
Using the Video Player .....	5
Changing Configuration Settings.....	7
Using the Text Viewer .....	8
Using the Memo Screen .....	8
Using the Calculator .....	9
Playing the Card Game .....	9
Using an External Audio/Video (AV) Device.....	10
Using an External Camera .....	11

# Additional Features

## System Menu

The System Menu contains extra features such as: viewing multimedia, image, and text files stored on a USB flash drive; using a calculator; writing memos; playing games; and connecting audio / video devices. Access by touching **Menu** then **System Menu**.



---

	<b>Navigation</b>	Return to iFly 700 Moving Map Software.
	<b>Multimedia</b>	Listen to music and watch videos (see page 4).
	<b>Image Viewer</b>	View images in JPG, TIF or PNG formats (see page 6).
	<b>Configuration</b>	Adjust the backlight, calibrate the touch screen, adjust time and date settings, and view system information (see page 7).
	<b>Additional</b>	Access the clock, text viewer, memo, calculator, external audio/video, external camera, and a card game (see page 7).

---

# Additional Features

## Transferring Media Files to Your iFly 700

1. Connect a USB flash drive to your computer. Copy your video, music, image, and text files to the USB flash drive. Available formats are:

Video	Audio	Images	Text
AVI, DIVX, MP4, M4A, MPEG, MPG, MPV, DTA	MP1, MP2, MP3, MPA, MKV, MKA, OGG, OGM	JPG, TIF, PNG	TXT

Notes:

- Some files may not play because of codec license issues.
- Progressive JPEG not supported.

2. Eject or stop the USB flash drive.

*Note: Do not pull the USB flash drive out of your computer without first ejecting or stopping it. Consult your Operating System documentation for information on how to eject or stop your USB Flash Drive. If this step is not accomplished the files may not be completely copied, and the transfer process may fail.*

3. Connect the USB flash drive to your iFly 700.

4. See page 4 to play multimedia files.

See page 6 to view image files.

See page 8 to view text files.

## Video Player Optimal Settings

If you have trouble playing compressed video files (AVI, MPG, etc), you can convert them to their optimal settings shown below. You may need to download a codec converter from the Internet to perform the conversion.

Video optimal settings

- Resolution: 640x480
- Frame per second: 15-20 fps
- Bit rate: 150 kbps, (250 kbps for fast moving pictures)
- Codec: DIVX4

Audio optimal settings

- Bit rate: 64 kbps
- Sampling rate: 44 KHz
- Mode: stereo
- Codec: MP3

# Additional Features

## Transferring Audio and Video Files to the Play List

1. Make sure the USB flash drive containing your files is plugged into the iFly 700 (see page 3).
2. From the **System Menu**, touch the  **Multimedia** icon.
3. From the **Multimedia** screen, touch the  **Play List** icon at the bottom of the screen.
4. The **Multimedia Play List** screen opens (see below).
5. Touch **USB Disk** to view the files on the USB.
6. Touch  to copy all files to the Multimedia Play List, or select one file and touch  to copy it.
7. Touch **Save** to save changes and return to the **Multimedia** screen, or touch  to return without saving.



## Using the Multimedia Player

1. Access the Multimedia Player by touching **Menu** → **System Menu** → **Multimedia**.  
*Note: First copy files to the Play List (see above).*
2. Operate the Multimedia Player using controls shown below.
3. Touch a file name shown in the Play List. Play will begin automatically.
4. Touch  or  to view additional Play List pages.
5. Touch  or  to switch between audio and video mode.

# Additional Features

In video mode, touch the screen for full size. Touch again for default size

The screenshot shows the Multimedia player interface with a video of Spider-Man. The top bar contains several icons: a speaker for mute, minus and plus signs for volume, a refresh icon for Play all, a square with 'M' for Repeat one, a square with '123' for Repeat all, and a square with 'R' for Random. A close button (X) is on the right. A navigation menu is open on the right side, showing a list of files: [PDA]ChaeYun.avi, Sister.avi, [PDA]ChaeYun.avi, and Sister.avi (highlighted). The bottom bar contains playback controls: Play/Pause, Stop, Rewind, Fast forward, Prev. item, Next item, Open Play List, Equalizer (set to Normal), and Video/Audio. A progress bar at the bottom shows 00:06/03:30.

Annotations for the top bar:

- Mute volume
- Lower volume
- Raise volume
- Play all
- Repeat one
- Repeat all
- Random
- Return to main menu without closing Multimedia
- Return to main menu and close Multimedia

Annotations for the navigation menu:

- Open navigation without closing Multimedia
- Change screen ratio to 4:3 or 16:9
- Play List page up
- Play List page number
- Play List page down
- Touch to open Play List item

Annotations for the bottom bar:

- Play / Pause
- Stop
- Rewind
- Fast forward
- Prev. item
- Next item
- Open Play List
- Equalizer
- Video / Audio

## Using the Video Player

- When using the Video Player in full screen mode, you can touch the screen in the areas shown below to control the volume or return to the Multimedia Player's default screen size.
- If you have trouble playing videos, see page 3 for available formats and optimal settings.

The diagram shows a video player in full screen mode with a Spider-Man video. Dotted lines indicate touch areas for volume and screen size control.


- Mute volume**: Touch the top-left corner.
- Raise volume**: Touch the top-right corner.
- Lower volume**: Touch the bottom-right corner.
- Return to default screen size**: Touch the bottom-left corner.



# Additional Features

## Changing Configuration Settings

Access the Configuration menu by touching **Menu** → **System Menu** → **Config**.

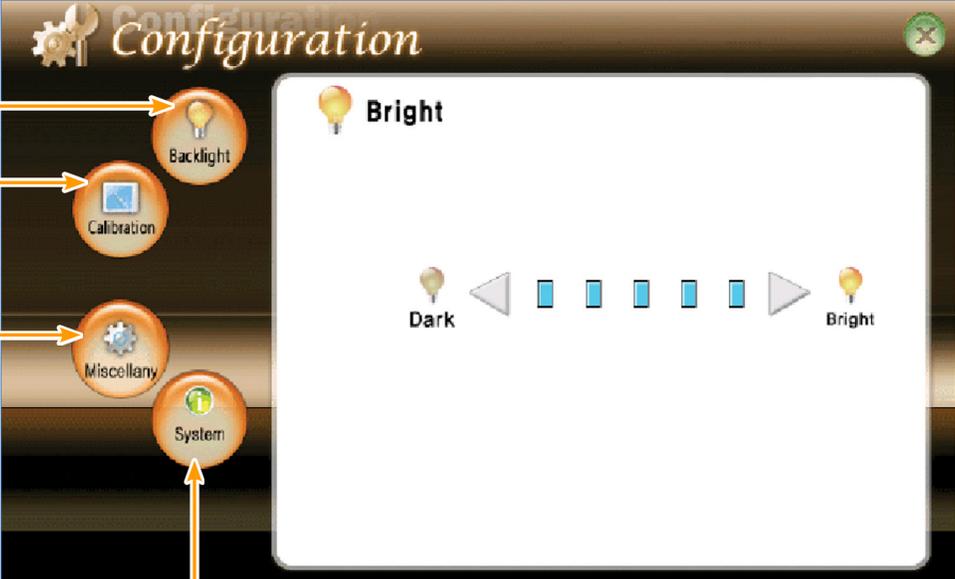

The screenshot shows the 'Configuration' menu with four main options: Backlight, Calibration, Miscellany, and System. The 'Backlight' option is selected, showing a slider control for adjusting brightness from 'Dark' to 'Bright'. Annotations with arrows point to each menu item and provide instructions.

Adjust backlight brightness

Calibrate the touch screen  
Note: When calibrating the touch-screen, use a stylus, toothpick, or plastic pointed object

- Enable button sound
- Choose to start the iFly 700 in System Menu or Navigation
- Reset the GPS
- Enable daylight savings time
- Set a time zone

Note: Do not activate the Screen Saver; it is not compatible with the Moving Map Software

Shows system and software information

## Using the Clock


1. Access the Clock by touching **Menu** → **System Menu** → **Additional** → **Clock**.
2. The current date and time are displayed on the screen.
3. The current date and time are taken from GPS data when the device is on. If the time is not correct, check the daylight savings time setting (touch the **Miscellany** button in the **Configuration** menu, see above).



# Additional Features


## Using the Text Viewer

1. Access the Text Viewer by touching **Menu** → **System Menu** → **Additional** → **Text Viewer**.  
*Make sure the USB flash drive containing your files is plugged into the iFly 700 (see page 3).*
2. Touch the “Search for text” button. A file window appears.
3. Choose a .TXT file from the file window and touch **OK**.

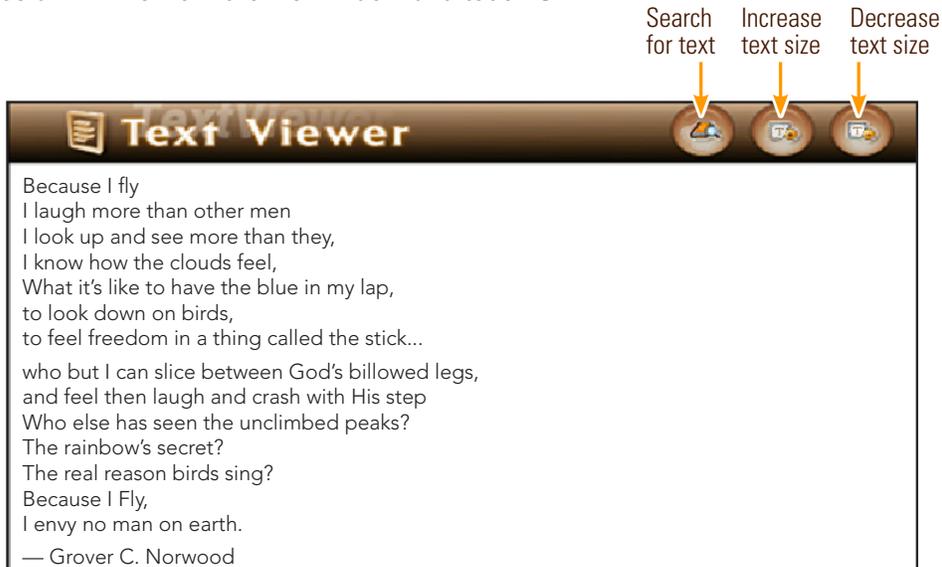

## Using the Memo Screen


1. Access the Memo Screen by touching **Menu** → **System Menu** → **Additional** → **Memo**.
2. Use your finger or a stylus to write on the screen.

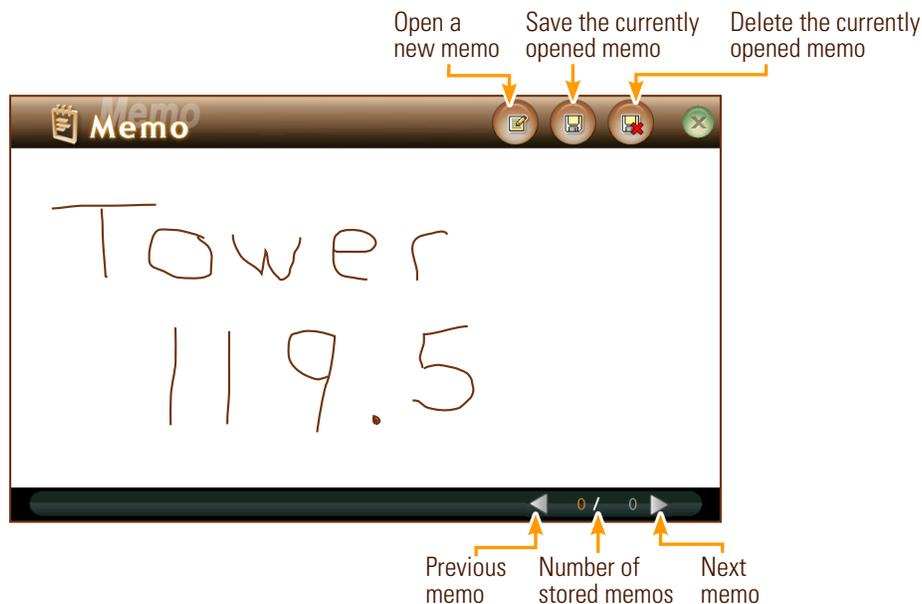

# Additional Features


## Using the Calculator

1. Access the Calculator by touching **Menu** → **System Menu** → **Additional** → **Calculator**.

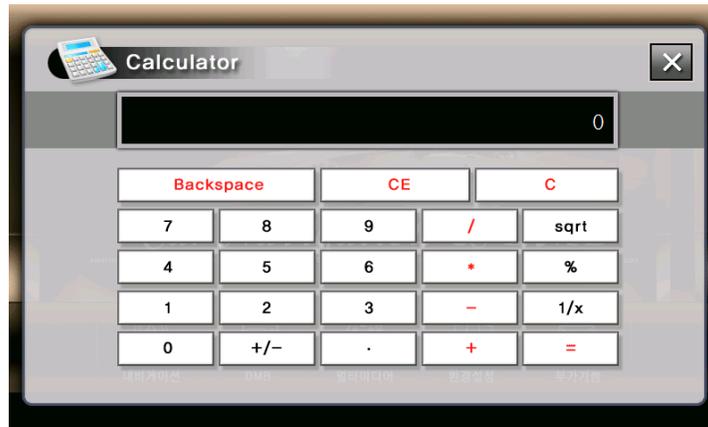

## Playing the Card Game

1. Access the Card Game by touching **Menu** → **System Menu** → **Additional** → **Game**.

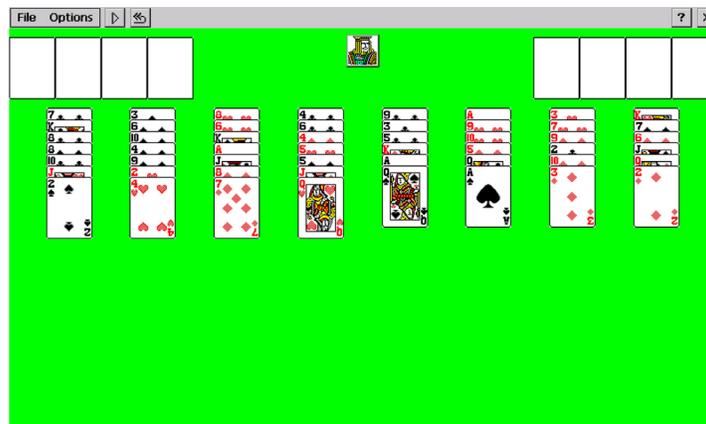


# Additional Features


## Using an External Audio/Video (AV) Device

1. Connect an AV cable between your AV device and AV-In jack on the side of the iFly 700.

*Note: Make sure your AV cable jack matches the configuration shown below (except video portion not required if only playing audio).*

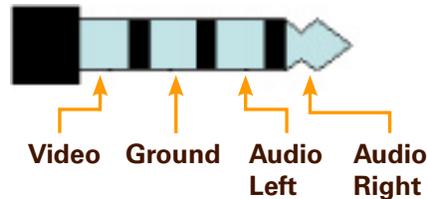

2. Access the AV feature by touching **Menu** → **System Menu** → **Additional** → **AV**.

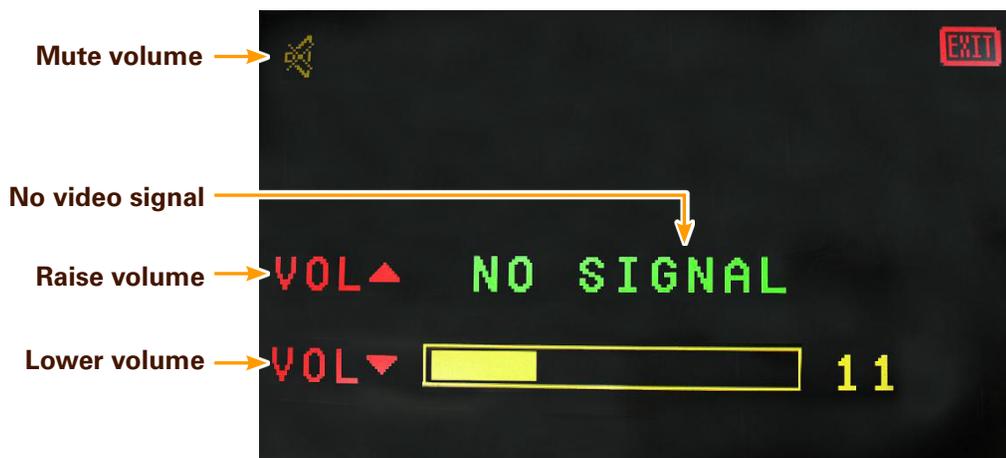


# Additional Features

## Using an External Camera

1. Connect your external camera to the R-CAM jack on the side of the iFly 700.

*Note: Make sure the camera cable jack matches the configuration shown below.*

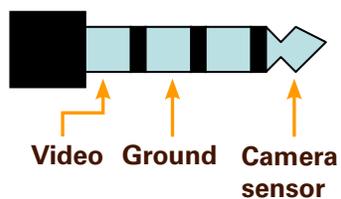

2. Access the external camera by touching **Menu** → **System Menu** → **Additional** → **R-CAM**.

